

# GeoVision Blackberry Remote Viewing Guide

## **GeoVision Blackberry Access Setup**

The GeoVision software CD included with GeoVision DVR cards and GeoVision IP camera software includes a program on it called BBView. BBview is the blackberry application that needs to be installed. To install BBview, please follow these steps:

1. Unzip BBView.zip
2. Browse BBView folder which you have just unzipped, double-click and run Setup
3. Proceed in each step. Select installation path and select Next to continue
4. Proceed until installation has finished
5. Connect your BlackBerry via USB to your computer and launch BlackBerry Desktop Manager
6. In the menu, select Application Loader, which will display all the applications currently loaded on your BlackBerry
7. Locate Add button above the applications, click on the button to bring up add application dialog box
8. Navigate to the folder as selected in Step 4. By default, the path is C:\program files\geovision\bbview. Locate the file in the folder with .alx extension
9. Choose OK and this application will appear in the list along with the other software installed previously
10. Once all desired applications have been introduced into the application loader, verify that each of the application has a check mark next to them.
11. Click Next which appears below the list of applications
12. BlackBerry Desktop Manager will perform synchronization and your BlackBerry may restart  
Upon rebooting, GeoVision BBView should appear on the applications screen of your device

## **Connecting the Blackberry to GeoVision DVR**

To connect your BlackBerry phone to GV-DVR, follow these steps:

1. To activate TCP/IP connection on your BlackBerry, check with your phone service provider for the correct APN (Access Point Name) and configure the APN on your phone. (e.g. go to Options and TCP)  
For example, T-mobile APN is wap.voicestream.com No username/password is needed
2. To connect to GV-DVR, select BBView application installed on your device (normally on BlackBerry desktop)
3. Select Create Live Connection. In the login screen, enter the IP address, port number, username and password used by GV-DVR.  
The default port number is 8866. Select Connect to initiate connection